

WiseDive

Handheld torches



INSTRUCTIONS & CARE ADVICE

Thank you for buying your WiseDive torch. Your new torch is a high quality precision manufactured device that will benefit from some basic care. Please take some time to read these instructions and retain for future reference.

OPERATIONS

To switch on your torch and use the various power levels please refer to the table below:

On/off	Turn to left and release
Flight lock ON	Turn to left and release four times within two seconds, check the orange indication on the back, turn left and release left once more
Flight lock OFF	When in flight lock mode, turn left four times within two seconds to turn the light on
Strobe	While on turn left and hold
Toggle through the output modes	Turn right and hold - will toggle through the output modes: 100% -> 80% -> 60% -> 40% -> 20%
Toggle through operating modes	Turn right and release - will toggle through operating modes: Normal mode -> Boost mode -> Tail light on with no mainlight -> Tail light & main light on -> SOS



Your WiseDive torch can be used in and out of water. If ran at maximum power for a long period of time you may notice it return automatically to continuous drive mode. This is an in-built feature designed to prevent overheating and maximise battery life.

MAINTENANCE

To clean the torch simply rinse in fresh, clean, warm water. Never use alcohol or any chemicals to clean the torch. Ensure the charger plug is clean and dry and refer to the section on charging below.

CHARGING

To charge your WiseDive torch use the cradle charger. When using the cradle charger slide the torch into the cradle aligning the silver quick lock ring with the cradle carving.

Taillight battery status indication:

80 - 100%	: 2 blue flashes
60 - 80%	: 4 blue flashes
40 - 60%	: 2 orange flashes
20 - 40%	: 4 orange flashes
0 - 20%	: continuous orange light

Cradle charger indicator:

Orange when charging
Blue when 90% recharged

ADDITIONAL DAILY CARE GUIDELINES FOR DIVERS

For diving use please follow these simple daily care guidelines. Failure to do so may reduce the life of your torch and ultimately result in the warranty becoming void.

BATTERY CARE

To maximize battery life, never store your WiseDive torch with the battery discharged. This will eventually cause the battery to deteriorate to the point of not being able to hold a charge. Incorrect treatment of the battery may lead to the warranty becoming void.

END-CAP

All WiseDive torches have a waterproof end-cap with a double O-ring seal. If the end-cap has been properly inserted before diving the charger plug will remain dry during your dive. Always insert the end-cap. While the torch itself is waterproof the end-cap also keeps out sand and dirt. If the end-cap has not been inserted correctly before diving you will need to remove it after your dive to clean your torch.

CLEANING AFTER DIVING

Rinse the torch immediately with fresh water to remove any salt crystals, sand, or dirt and dry thoroughly (paying particular attention to the charger plug) before charging. If dirt has accumulated in the lens cavities simply rinse the torch in fresh, clean, warm water. You can use a little dish washing soap, but never use alcohol or any chemicals to clean the torch as this will cause permanent damage to the lens. Check the end-cap O-rings seal and remove any sand or dirt. Ideally rinse the torch in fresh water while it is still wet from your dive to prevent salt crystals from settling in the charger plug. If the quick lock ring or end-cap are jammed due to salt deposit simply soak in fresh, clean, warm water for approximately one hour, do not force these parts. Regular lubrication of the screw thread, gasket and end-cap O-rings seal is recommended. Use only silicon based grease or oil.

CHARGING AFTER DIVING

It is very important that the torch is rinsed in fresh water and dried thoroughly (air or blow dried) before charging. Please ensure the charger plug is completely dry and refer to the section on charging in this document for further information.

GENERAL WARNINGS

Never try to open a WiseDive torch, this will break the seal and void the warranty. For parts and repair inquiries please contact WiseDive.

Never use the rear end charge plug for anything other than charging.

Always rinse in fresh water after diving in salt water and before charging. Always dry the torch thoroughly before charging and pay particular attention to the charger plug. Always store your WiseDive torch fully charged. Never drop or subject your WiseDive torch to any sudden harsh impact.

WARRANTY

Guarantee conditions: You have a 2 year guarantee (limited guarantee for the batteries) if any problems arise with your WiseDive product. Return your WiseDive product to our address after which we will correct the problem as soon as possible or alternatively send you a new product.

Vandalism, misuse or the like are not covered by the exchange rights. Enclose your receipt when exchanging the product. The warranty will become null and void if the product is misused, abused, tampered with or taken apart.

NOTE

Product specifications may change without notice. Please check the update specification in our website.

WiseDive

Nellebakken 5
DK 3250 Gilleleje
Denmark
Phone +45 8888 7300
www.wisedive.com
support@wisedive.com